

EXODUS™ AQUA67

**WEATHERPROOF IP67 IK10 - WALL ONLY
MAINTAINED LED EXIT LIGHT**

The AQUA67 is a sturdy wall mounted LED Exit Light that is designed to withstand external environments and harsh weather conditions. It produces excellent illumination with a long lasting battery for years of dependable Exit Lighting. Its robust, water-tight polycarbonate enclosure provides excellent protection against water, dust and impact and is well suited for a range of outdoor applications such as car parks and exposed stairwells, as well as indoor areas such as swimming centres, construction zones and train stations.



Available as:



SYNTHIUM[™] nanotechnology is an advanced environmentally sustainable energy development that offers extended battery life, low cost of ownership, enhanced performance and improved safety.




Technical Specifications

Item	Part Number	EXS-AQUA67/A - No Arrow EXS-AQUA67/R - Arrow Right EXS-AQUA67/L - Arrow Left
	Description	LED Weatherproof IP67 IK10 Wall Mount 24m Exit Light c/w <i>Synthium™</i> Battery
Input	Voltage & Frequency	230VAC ; 50Hz
	Installation	Large terminal block and 20mm ² cable entry
Output	Light Source	High performance LED bar, 100,000 hours
	Mode of Operation	Maintained
	Power Consumption	2W (standby)
	Emergency Duration	> 120 minutes
Controls	Charger	Intelligent 3-stage charger with <i>Synthium™</i> battery management system
	Protection	Overcharge, low voltage disconnect, overcurrent, short circuit
	Testing Facility	Manual test switch
	Indicators	Battery charger green LED
Physical	Battery	<i>Synthium™</i> Lithium Iron Phosphate - 10 year design life
	Diffuser	Screen printed acrylic - pictographs as per part numbers above
	Construction	Flame-retardant polycarbonate
	Mounting	Surface mounted - wall or ceiling (single or double side application)
	Dimensions L x W x H	385mm x 185mm x 135mm
	IP, IK Rating	IP67, IK10
	Weight	2.5kg
Environment	Operating Temperature	1° to 40°C
	Relative Humidity	0 to 95%
Compliance	Standards	RCM / EMC, AS/NZS 2293, AS/NZS 60598.1
	AS/NZS 2293 Classification	C0 E2.5 C90 E1.6
Accessories	STAR™ Self-Test and Reporting	P/N: EXS-AQUA67/ST
	DALI-compatible	P/N: EXS-AQUA67/DL
	SYNECTIX™ RF Wireless	P/N: EXS-AQUA67/RF
	Replacement Battery	P/N: BAT-AQUA67: <i>Synthium™</i> LiFePO ₄

NOTE: Product specifications subject to change without prior notice due to ongoing product improvement policy and changes to industry standards.

Dimensions

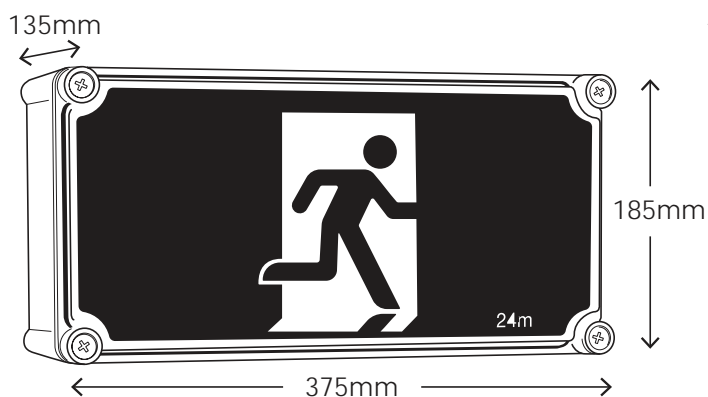

AS/NZS 2293.1:2018 Spacing Table

This product performs the dual role as an 24m Exit Sign and an Emergency luminaire with the following NATA-accredited emergency classifications:

SPACING TABLE		MOUNTING HEIGHT (m)			
NATA Classification		2.1	2.4	2.7	3.0*
EXS-AQUA65	C0 - E2.5	5.4	5.6	5.8	5.8
	C90 - E1.6	4.6	4.7	4.6	0.0

* Maximum mounting height allowed is 2.7m but for exceptions see AS2293.1:2018

